

Rapimix 200 Stick Blender

Operating Instructions



t 01766 830 456 e sales@metcalfecatering.com www.metcalfecatering.com

Index

Technical Data	3
Your Blender	4
Installation	
- Unpacking	5
- Before First Use	5
- Before Each Use	5
- Electrical Connection	5
Operation	6
Safety Instructions	7
Cleaning Instructions	8
Maintenance	8
Spare Parts & Service Contact Details	9
Warranty	10

Rapimix 200 Stick Blender

Heavy duty, ergonomic hand-held stick blender designed to make light work of any mixing and blending.

Features


- Rapimix 200 features a powerful 250w motor capable of producing speeds of 15,000 and 15,000rpm
- 2 speed and continuous operation selectable
- Designed to handle quantities of up to 20ltrs
- 2 metres of cable and a wall mounting cradle for ease of storage
- A fully waterproof, sealed, stainless steel shaft allows for easy cleaning and perfect food safety
- Shaft, foot and blades in stainless steel, motor cover in solid metal casting and handle in high quality synthetics
- Capable of 8 minutes continuous use
- CE Approved

Specifications

Model	Product Code	Depth of Insertion (mm)	Processing Quantity (Ltr)	Speeds (rpm)	Motor (Volt)	Frequency (Hz)	Power (kW) / (hp)
Rapimix 200	5SB8220	200	Up to 20	15,000 / 20,000	230	50	0.25 / 0.33



Your Blender

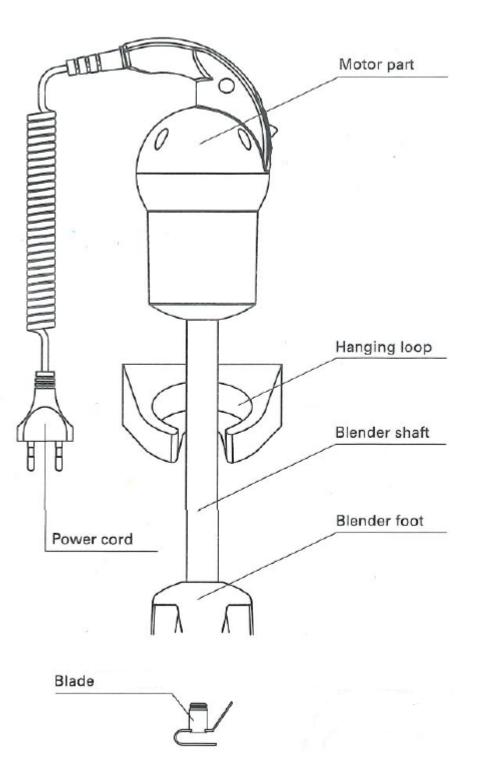

Installation

Unpack the blender immediately after receipt. Please inspect it to ensure no damage and all parts have been provided. If the machine is found to be damaged, keep all the packaging material and contact us immediately or contact your source of the equipment. Never attempt to operate the machine with damaged parts. Report any deficiencies to the dealer that supplied the machine.

You should receive with your blender:

- 1 x Handheld stick blender
- 1 x Wall mounting cradle/Hanging loop

If any of the above items were not received with your mixer, please refer to page 9 for contact details and inform us immediately for replacements.

Before first use

- Before using the appliance, please read this manual thoroughly. Do not proceed with any installation nor operation if you have any questions or do not understand anything within this manual. Please see contact details on page 9 for assistance.
- Clean the blender shaft, blender foot and blades before use following the cleaning instructions on page 9.

Before each use

- Check the appliance for damage
- Check the cord for damage
- Check the blades are properly fixed in position
- Check your power source is of the same voltage as indicated on the product

Electrical Connection


- Before connecting the mixer to an electrical supply, please read the specifications on the rating plate to ensure that they comply with those of the electrical supply.
- The appliance works off 220/240V 50Hz 1 phase supply and comes fitted with a 3-pin 13amp fused plug.
- An electrical supply should be available within the reach of the included power cord. **DO NOT** use extension cords to connect the machine's power cord to the electrical supply. The low AMP supply could damage the appliance or cause a fire.
- All wiring connections must be checked and tight.

Once the electrical connection has been made, the machine is ready for use.

Operation


- Insert the power plug
- Before turning on the appliance insert the blender in an upright position into the container holding the food to be processed. Never switch on the appliance when outside the container



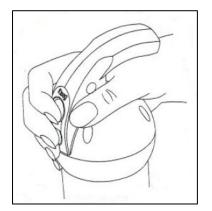

 Right-handers take the appliance with the right hand and left-handers take it with the left hand

- Turn the appliance on by pushing I or II and keep it pressed, the appliance runs with the rotation speed chosen (I = low speed, II = high speed)
- Never operate continuously for more than 8 minutes at a time. Allow the blender to cool afterwards
- The appliance turns off when the pressed button is released

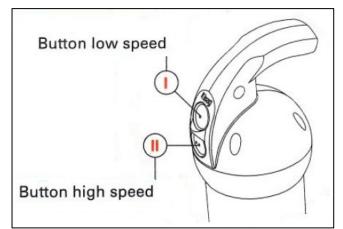

- Ensure that the blades have stopped completely before lifting the appliance out of the food
- When blending action is completed unplug appliance from the electrical outlet

Safety Instructions


- Save these instructions
- Safety instructions must always be followed to prevent damage resulting from the use of this appliance
- This appliance is not intended for use by persons (including children) with limited physical, sensory or mental faculties or with a lack of experience and/or knowledge, unless they are continually supervised by a person responsible for their safety or have been carefully instructed in the use of the appliance
- Children should always be supervised to ensure that they do not play with the appliance
- In case of emergency unplug from outlet immediately
- Do not touch power cord when your hands are wet
- Do not remove plug from outlet by pulling the cord
- Do not clean the cord using water and do not immerse in water or other liquid
- Do not damage power cord and keep away from hot or sharp parts etc
- Do not operate hand blender if it is damaged
- Cable is to be replaced only by an engineer approved by Metcalfe Catering Equipment
- Blades are extremely sharp and may cause cut injuries. Wear suitable protection gloves
- Do not operate hand blender after the appliance malfunctions or if it is damaged in any manner. Contact our service department who will be able to help you
- At the end of its operating life the appliance should be recycled or disposed of properly
- NEVER dismantle or try to repair the appliance. Do not insert anything into the openings of the appliance.
- Do not use hand blender for other than intended use
- To prevent injuries or damage the appliance must only be repaired by an engineer approved by Metcalfe Catering Equipment
- Maximum air humidity 90-95%
- Environmental temperature 0°C-40°C
- Keep in a dry place

Cleaning Instructions

- Ensure appliance is unplugged
- Observe the safety instructions
- Do not hose the appliance with a high-pressure cleaner
- Remove the blade from drive shaft wearing an appropriate protective glove
- Brush blender shaft, blender foot and blades thoroughly with hot water mixed with your usual detergent
- Check that food particles are removed completely from any gaps
- Rinse thoroughly with warm water afterwards
- Never allow water to run onto the motor housing
- Leave to dry
- Wipe the motor housing clean with a damp cloth or sponge (soapy water). Never immerse in water and avoid splashing during cleaning
- After cleaning the appliance, wearing an appropriate protective glove, push the blade on the drive shaft again till the retaining spring engages


Maintenance

The blade is a wearing part and can be ordered under item no SB8220.210 in case of abrasion. Check the condition of the shaft seal occasionally. If the shaft seal is damaged, it must be replaced by an engineer approved by Metcalfe Catering Equipment Ltd.

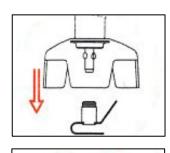





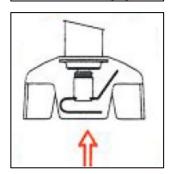

Spare Parts and Service

For more information on Metcalfe spare parts, accessories and service support, including breakdown drawings and parts lists please contact us on the details below.

Please always quote the Serial Number of the machine. This can be found on the serial number plate which is located on the appliance.

Metcalfe Sales & Spares Department	sales@metcalfecatering.com	
Metcalfe Service Department	service@metcalfecatering.com	
Metcalfe Website	www.metcalfecatering.com	
Metcalfe Telephone Number	01766 830 456	

Additional copies of this instruction manual can be obtained by either visiting our website or contacting the sales department.

Metcalfe Warranty

All Metcalfe products are guaranteed against defects in material and workmanship for a period of one year from date of invoice, except where specifically noted.

The Company's obligation under this warranty is limited to repairing or replacing, without charge, any part or parts found to be defective under normal use, in accordance with the specified operations manual and capacity ratings.

On all return to factory warranty items, it is the responsibility of the purchaser to return the entire unit to the factory, in a clean condition, properly packed and labelled.

All repairs, alterations or replacement of materials or parts not authorised by Metcalfe will automatically void all warranties in their entirety.

All Metcalfe slicers (except Simple Line) and EC20 chipper are covered by a 2-year warranty (1st year parts and labour, 2nd year parts only) and full after sales service.

All Metcalfe MP mixers are covered by a 3-year warranty (1st years parts and labour, 2nd and 3rd year parts only) and full after sales service.


There is a limited 6-month warranty on the following:

- Mixer attachments (beater, whisk and dough hook)
- Chipper blades
- Parts purchased or supplied for the repair of Metcalfe equipment

This warranty does not cover the following:

- Failure due to incorrect installation
- Failure due to neglect, abuse, careless handling or misuse of machine
- Failure caused due to improper maintenance
- Blender clutches
- Knives and gears on can openers
- Sharpening of slicer blades
- General wear and tear

Metcalfe and its suppliers reserve the right to make changes in design and specification to any product without prior notification.

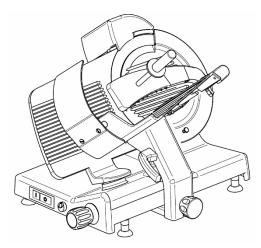


NS Slicer Range



Peeler Range



Ceado

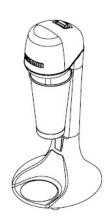

Roband



