


- 1** Always rinse the container after use to prevent residues from drying in the container.  
Lift the container from the holding base.  
Remove the container lid and clear middle from the lid.
- 2** Rinse the container and lid under running water and wash with warm water and washing liquid.  
Dry the container by turning it upside down on the drainboard.



**Do not dry the container in the oven or microwave oven.**



For longer life of the container we recommend not washing it in the dishwasher.

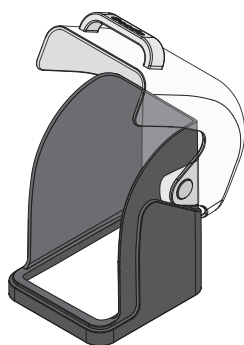

- 3** **To clean the motor base**, unplug the appliance and clean with a damp cloth or alcohol, or use a generic detergent spray.  
Dry with a dry cloth.



**For cleaning the sound enclosure:** wash with warm water and dishwashing detergent. Dry with a soft cloth.



**Never wash the blender with jets of water or immerse the motor base.**