





 


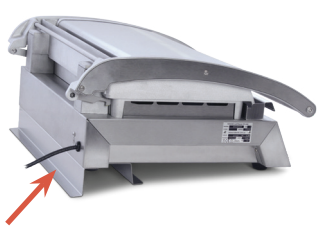 
MANUFACTURER:	Roband Australia
CATEGORY:	Grill Stations
MODEL / DESC:	Accessories
ORIGIN:	Australia
WARRANTY:	1 Year <small>(refer to website)</small>



 

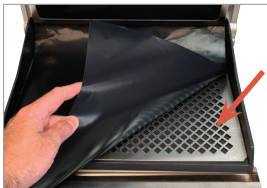 




## Grill Station Accessories

### Many Options to Extend Versatility of Grill Stations

A wide range of optional accessories are available separately to enhance the functionality and cleanliness of Roband Grill Stations.

MODEL	DESCRIPTION	SUITS GRILL STATION MODEL	ACCESSORY IMAGE	SHOWN IN SITU
<b>GRILL SHEET</b> Keeps plates clean during use. Remove for washing. Non-stick/PTFE material. Ideal for high productivity and fast cleaning. Requires Retainer Clip to hold in place on Grill Station top plate.				
PGS605	Pack of 5 sheets. Use with RC6	GSA610 GSA610SE		
PGS610	Pack of 10 sheets. Use with RC6			
PGS805	Pack of 5 sheets. Use with RC8	GSA810 GSA815 GSA810SE GSA815SE		
PGS810	Pack of 10 sheets. Use with RC8			
<b>SHEET RETAINER CLIP</b> Holds Grill Sheet in place on top plate of Grill Station.				
RC6	Retainer clip used with grill sheets (PGS605/PGS610)	GSA610 GSA610SE		
RC8	Retainer clip used with grill sheets (PGS805/PGS810)	GSA810 GSA815 GSA810SE GSA815SE		
<b>SIDE DRAINING GREASE CHANNEL</b> Handles high volume of grease from cooked food by draining into a side positioned collection vessel such as a small steam table pan. Not available for the electronic timer models.				
GC6	Channel to drain grease into side positioned collection vessel	GSA610		
GC8	Channel to drain grease into side positioned collection vessel	GSA810 GSA815		
<b>REAR STAND</b> Raises rear of Grill Station so grease drains forward into the forward positioned grease collection box or optional side draining grease channel.				
RS6	Raises Grill Station rear	GSA610 GSA610SE		
RS8	Raises Grill Station rear	GSA810 GSA815 GSA810SE GSA815SE		

MODEL	DESCRIPTION	SUITS GRILL STATION MODEL	ACCESSORY IMAGE	SHOWN IN SITU
<b>PLATE SPACER</b> With various sizes available, plate spacers are designed to maintain a consistent space between top and bottom plates during operation. These are ideally suited for preparation of delicate products such as croissants.				
GSPS625	Maintains 25mm between plates	GSA610 GSA610SE		
GSPS635	Maintains 35mm between plates			
GSPS645	Maintains 45mm between plates			
GSPS825	Maintains 25mm between plates	GSA810 GSA815 GSA810SE GSA815SE		
GSPS835	Maintains 35mm between plates			
GSPS845	Maintains 45mm between plates			
<b>ALUMINIUM GRILL PATTERN PLATES</b> Designed to sit between Grill Station smooth plates and Grill Sheet with Retainer Clips, the pattern plates produce a crosshatched char grill style pattern on the food being produced.				
GS6-P1	Set of 2 pattern plates. Must be used with RC6 retainer clip & PGS605/PGS610 grill sheet	GSA610 GSA610SE		
GS8-P1	Set of 2 pattern plates. Must be used with RC8 retainer clip & PGS805/PGS810 grill sheet	GSA810 GSA815 GSA810SE GSA815SE		
<b>HEAT SHIELD</b> Designed to reduce temperatures on accessible touch points of the Grill Station by up to 100 degrees. The single piece shield clips to the top of the Grill Station without the need for tools. Comes as standard on electronic timer models.				
HS6	Heat shield	GSA610		
HS8	Heat shield	GSA810 GSA815		
<b>PREMIUM SPATULA</b> Additional spatulas to use with Grill Stations. One is supplied with every Grill Station.				
SP12	Pack of 12 spatulas	GSA610 GA610SE GSA810 GSA815 GSA810SE GSA815SE	