



1 To disassemble these components, unhook the locking arm and remove in this order; food pusher, juicer cover, basket, pulp retainer, and bowl.

i Reassemble in the reverse order taking care to place the juice spout in the appropriate slot of the motor housing, place the pulp retainer correctly, place the basket in the bowl, making sure that the basket's clutch disc is correctly inserted on the drive disc and position the juicer cover on the bowl.

2 To clean the juicer cover, bowl, basket, pulp container, pulp retainer and food pusher: rinse under running water and wash with warm water and washing liquid. Rinse and dry.

The removable parts of the juice extractor, with the exception of the pulp container, are dishwasher safe.



The pulp container should not be immersed in hot water.

Hot water can deform the pulp container making it impossible to use.

3 To obtain a higher yield of juice always control that the basket is well-cleaned by using a nylon brush. Put the basket under running water and use the brush to clean the inside of the strainer. Hold the basket up against the light to make sure that none of the perforations are blocked. Should the perforations of the strainer remain blocked, immerse the basket in a solution of hot water with 12% lemon juice or vinegar to loosen the blocked material. Alternatively, wash the basket in a dishwasher.

i To clean the motor housing, clean with a cloth dampened with water or alcohol or with a spray neutral solution. Wipe with a dry cloth.



Never put the motor housing under running water and never immerse the appliance in water.