

I

FRULLATORE

MANUALE D'USO E MANUTENZIONE

GB

BLENDER

USE AND MAINTENANCE MANUAL

F

MIXEUR

MANUEL D'UTILISATION

D

 
STANDMIXER

BEDIENUNGS- UND WARTUNGSANLEITUNG

E

BATIDORA

MANUAL DE USO Y MANTENIMIENTO

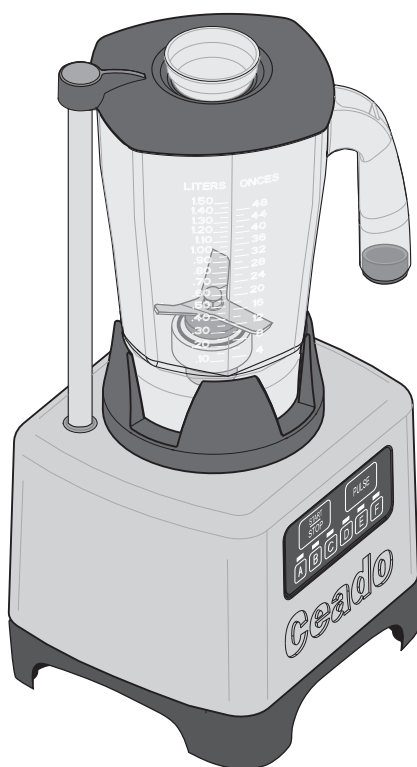

B210

FRULLATORE B210

Il frullatore modello **B210** è uno “SPECIALTY BLENDER” per ogni esigenza del bar.

Come tutti gli elettrodomestici deve essere utilizzato con particolare prudenza per evitare lesioni alle persone e danni all'apparecchio.

Leggere perciò con cura le presenti istruzioni per l'uso prima della messa in funzione ed attenersi alle prescrizioni relative alla sicurezza.



Non utilizzare l'apparecchio se non si conoscono adeguatamente le istruzioni per l'uso!

I

Pagina 4

BLENDER models B210

The **B210** is a “SPECIALTY BLENDER” for the special needs of the barman.

Like all appliances, it should be used with particular care to avoid injury to the personnel and damage to the appliance.

It is therefore essential to read these instructions carefully before using the appliance and to follow the safety recommendations.



Do not use the appliance if you are not sufficiently familiar with the instructions!

GB

Page 14

MIXEUR B210

Le mixeur modèle **B210**, c'est un « SPECIALTY BLENDER » pour toutes les exigences du bar.

Comme tous les appareils électroménagers, il doit être utilisé avec une prudence particulière pour éviter les blessures aux personnes et les dommages à l'appareil.

Lire attentivement les présentes instructions d'utilisation avant la mise en fonction de l'appareil et observer toutes les instructions concernant la sécurité.



Ne pas utiliser l'appareil sans connaître correctement les instructions d'utilisation !

F

Page 24


BLENDER B210

Main parts of the appliance (Fig. 1, Fig. 2)

- | | | | |
|----------|-----------------|-----------|---------------------|
| 1 | Motor base | 6 | Safety arm |
| 2 | Container | 7 | Blade |
| 3 | Lid | 8 | Container base |
| 4 | Filler cap | 9 | ON-OFF (I-O) switch |
| 5 | Magnetic sensor | 10 | Button panel |

Button panel (Fig. 3)

- | | |
|----------|-------------------------|
| 1 | START/STOP button |
| 2 | PULSE button |
| 3 | Button A, B, C, D, E, F |

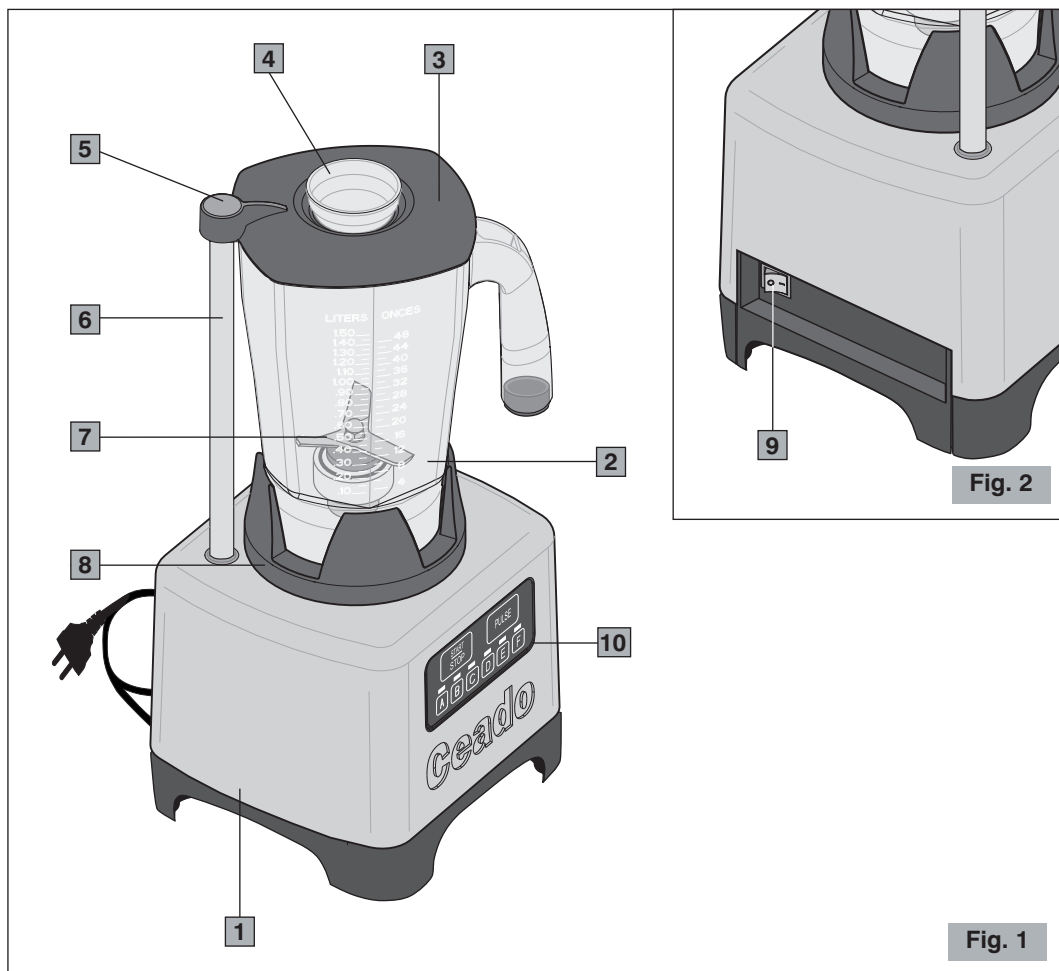 

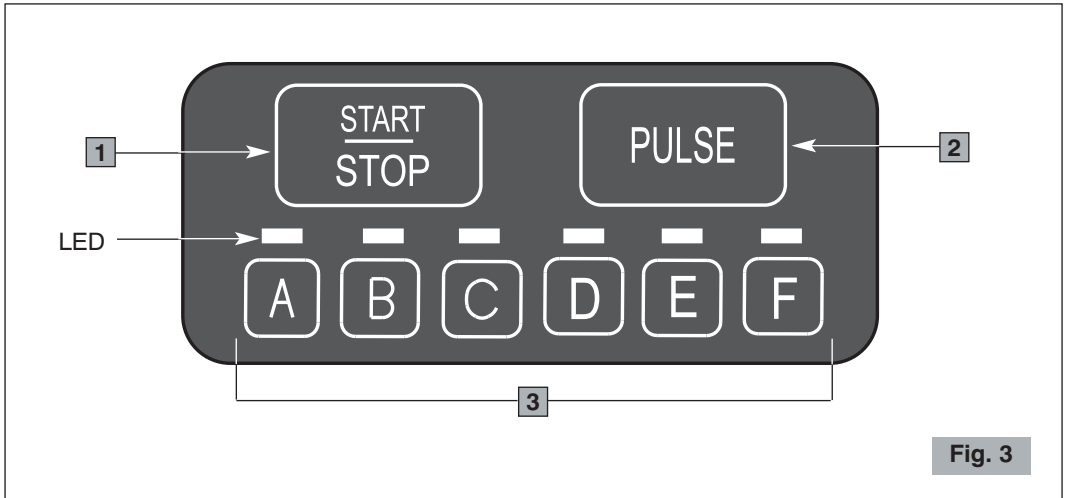 


Fig. 3

SAFETY RECOMMENDATIONS

GENERAL INSTRUCTIONS

1. Read the following instructions carefully before using the appliance.
2. Installation and any maintenance should be carried out by specialized personnel.
3. This appliance is intended for professional use, and should therefore be used by adults and qualified personnel only.
CLOSE ADULT SUPERVISION IS NECESSARY WHEN CHILDREN ARE NEAR THE APPLIANCE.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental abilities, or without experience and knowledge, unless they have been instructed in the use of the appliance and are under the supervision of a person who is responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.
5. **Never** use this appliance for any operations other than blending foods. Any other use is dangerous.
6. Always work under safe conditions: do not use the appliance with wet hands or feet. Do not use outdoors.
7. Keep the original package for possible future use. It is the most suitable protection against impact during transportation.
8. In case of fire use CO₂ extinguishers. Do not use water or powder extinguishers.
9. **Never** place the appliance in water!
10. Do not disassemble the appliance or attempt to perform any repairs inside it.
11. Always unplug the appliance before performing any maintenance or cleaning of the motor base, and when the blender is not in use.

12. **Never** pull the blender by the cord to move it. **Never** unplug it by pulling the cord or touching it with wet hands.



If the cord is damaged, it must be replaced by an Authorized Service Center.

13. The blender is equipped with a safety device to prevent any contact with moving parts. **DO NOT ATTEMPT TO BY-PASS THE SAFETY DEVICE.**
14. **WARNING:** Never place any utensils, metal or other hard materials, in the container. This is dangerous and could cause damage.
15. **Never** operate the appliance with the container empty and never run it for more than 15 seconds if there are no liquids in the container.
16. **Do not** use the blender if it is damaged or had any loosened parts such as blades, couplings, etc. In these cases, contact an Authorized Service Center immediately.
17. **WARNING: BLADES ARE SHARP. HANDLE WITH CARE!**

SAVE THESE INSTRUCTIONS!



The EC declaration of conformity for this appliance is available in the *Products* section of our website www.ceado.com.

INSTALLATION

Comply with the **Safety recommendations** indicated above and hereafter when installing the appliance.

 
1. Make sure that the mains voltage is as indicated on the rating label of the appliance and that the electric system is grounded and equipped with a differential switch.
2. Install the appliance in a **DRY, PROTECTED place**, far from water sprays or splashes, heat sources, open flames and inflammable substances.
Place the blender on a **flat, horizontal, stable surface** where it cannot tip over.
3. Make sure the switch on the appliance is in the "OFF" position and plug it into a socket protected by a magneto thermal switch or fuses.
Do not use a multiple outlet plug.
4. Stretch the power cable out to full length. **Do not** let it pass over sharp edges or hot surfaces. **Do not** let oil spill on it. **Do not** let the power cable hang loose from the counter on which the blender stands.

PREPARATION AND USE

- 1 Place the ingredients in the container in this order: first liquids and fruit, then ice and other solid foods.
- 2 Stand the container on the base fitting it into its support as shown in figure figura 4.
- 3 Fit the lid on the container so that the magnetic sensor is in contact with the end of the safety arm.

Note: When new, the lid of blender may require extra force to apply and remove. After a few times it will fit perfectly.

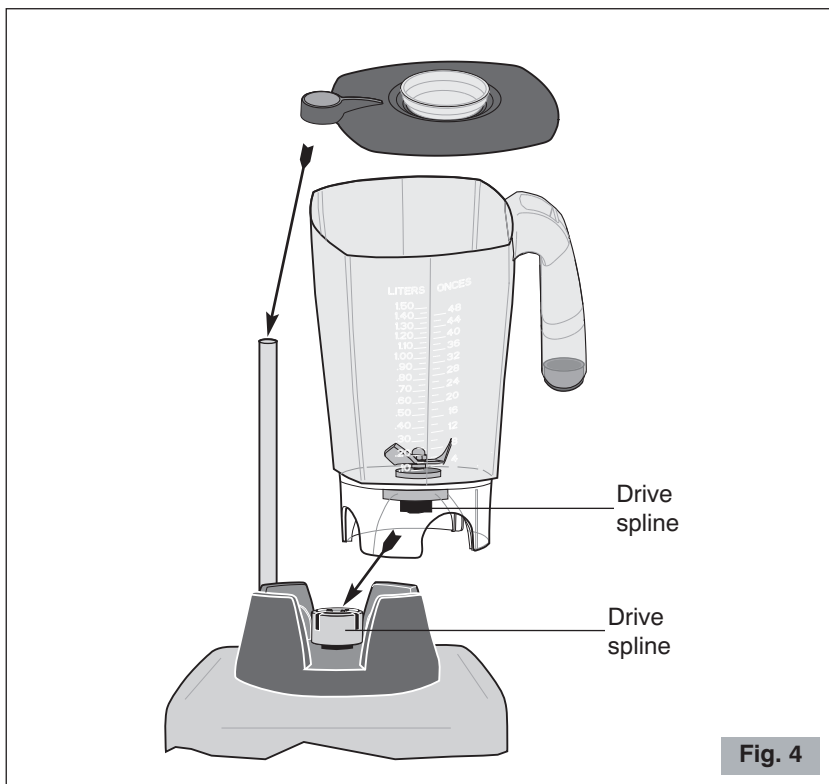

! Any attempt to by-pass the safety device and use the blender without its lid may cause personal injury and damage to the appliance.




- 4 Turn the ON-OFF switch (9, Fig. 2) to position ON (I).

Manual operation

When the appliance is switched on all the LEDs are lit meaning that the appliance is ready to operate.

- 5** Keep one hand on the lid (Fig. 5) and run the motor by pressing the  button. To stop operation, press the  button again.

The “PULSE” function can also be used, that is “momentary” operation, by pressing and holding down the button  for the whole operating time desired.

Note: You can use the “PULSE” function when preparing thick drinks that tend to “float” or to break up nuts or other ingredients that are unable to circulate in the working zone of the blades.

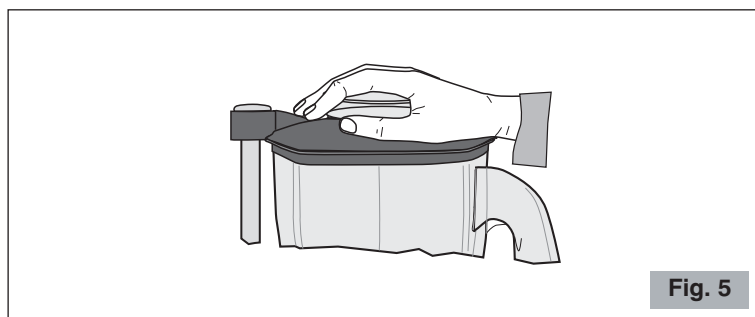








 Fig. 5







Automatic operation


This appliance has six predefined operating cycles (see table on next page), suitable for making the most popular recipes for cocktails, frozen drinks and smoothies completely automatically.



- 5** Keeping one hand on the lid (Fig. 5), select the desired cycle by pressing button , , , ,  or .

The motor will run for the time and at the speeds determined by the particular programme selected.

At the end of the cycle the appliance will return to its initial status.

Cycle	Running time	Description	Suitable for
	25 seconds	Starting at medium-low speed and ending to maximum speed.	SHAKES - Drinks with a base of coffee or ice cream
	32 seconds	Starting at medium speed, then accelerating gradually up to maximum speed.	COCKTAILS - Frozen alcoholic drinks without fruit
	42 seconds	Starting at low speed followed by peaks at maximum speed and zero, then ending at medium speed.	FROZEN - Frozen drinks with pieces of fruit
	20 seconds	Starting gradually up to medium speed and ending to maximum speed.	COFFEE - Drinks with a base of coffee
	25 seconds	Gradual but fast start up to maximum speed which continues till the end.	SMOOTHIE - General drinks without iced fruit, medium quantity
	45 seconds	Start at medium speed and change quickly to maximum speed.	SMOOTHIE2 - General drinks without iced fruit, large quantity

The cycle selected can be paused at any time by pressing the  button: the motor stops.

To resume operation press the  button again. If you want to cancel operation, hold down the  button for three seconds.

WARNINGS AND SUGGESTIONS

1. The blender is also designed to crush ice and prepare FROZEN DRINKS from ice in cubes. Remember that if you place the ice in the container already crushed this will greatly extend the life of the appliance.
 2. The blender is designed to ensure perfect preparation of the FROZEN DRINKS recipes contained in the international texts of the IBA associations. If you use the quantities indicated in those recipes you will always obtain the desired consistency.
 3. Certain preparations may cause cavitation of the blender. This means the ratio of liquid to ice is not correct. If this occurs, switch the blender off, remove the lid, stir the mixture with a spoon and try again.
 4. If you have to heat or chill a preparation made with the blender, do not place the container directly in the oven or freezer. This could damage it. Empty the container into a suitable vessel.
-

CLEANING AND MAINTENANCE

It is important to keep the appliance clean and in good working order to ensure optimum quality of the products and long life of the appliance. Always rinse the container after use to prevent residues from drying in the container. This could damage the sealing elements and bearings, or cause the blades to seize.

Do not dry the container in the oven or microwave oven.

For longer life of the container we recommend not washing it in the dishwasher.

- **To clean the motor base**, unplug the appliance and clean with a damp cloth or alcohol, or use a generic detergent spray.

Dry with a dry cloth.



Never wash the blender with jets of water or immerse the motor base.

- **To clean the container:** after rinsing the container and lid under the tap, fill the container halfway with warm water and a spoonful of dishwashing detergent. Fit the container on the base, cover with the lid and run for 20 seconds. Remove the container and rinse with running water. Repeat the operation with 1 liter of warm water and 5 ml of bleach. Remove the container, rinse and dry the container by turning it upside down on the drainboard. Wash the lid with warm water and dishwashing detergent.

 


Do not expose the lid to temperatures above 60°C. This would damage the magnetic sensor.

- **For thorough periodical cleaning** remove the blades as shown in figures 6, 7, 8 and 9.

Wash in warm water with dishwashing detergent and use a small brush to remove any solid residue.


Reassemble in reverse order and make sure to tighten all parts.

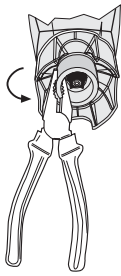

Bottom of
container

Unscrewing the lock ring

 Fig. 6

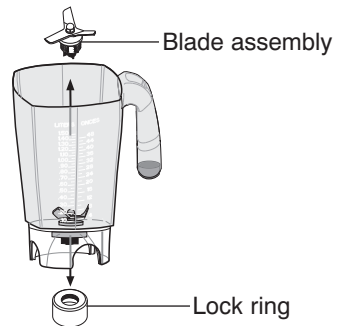


Blade assembly

Lock ring

Removal of blade assembly

 Fig. 7

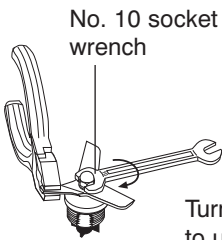


No. 10 socket
wrench

Turn clockwise
to unscrew

Disassembling blade

 Fig. 8

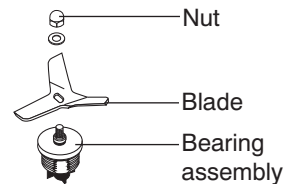

Nut

Blade

Bearing
assembly

Blade assembly parts

Fig. 9

TROUBLESHOOTING

In case of any malfunction, defect of the appliance or if you suspect any breakage after a fall, unplug the appliance immediately.

If you are unable to solve the problem referring to the table below, contact an Authorized Service center.

Only qualified experts should repair the appliance.

We are not liable for any damage caused by repairs not made correctly by unauthorized personnel. In these cases the warranty does not apply.

Problem	Solution
The blender does not start.	<ul style="list-style-type: none"> • Make sure it is plugged in. • Make sure the safety circuit breaker is closed. • Make sure the magnetic sensor in the lid is touching the safety arm. • Make sure the switch on the blender is turned to ON. • If the problem occurs after a long period of intensive use the motor may have overheated. Wait at least 20 minutes and try again. If you put the blender in a cool place this will reduce the waiting time. • If the problem occurs after an overload, the circuit breaker on the motor may have been tripped! Push the button on the back or bottom of the appliance (not standard equipment on all models). • Make sure the blades and motor revolve freely.
The blades do not turn with the motor on.	<ul style="list-style-type: none"> • Make sure the rubber clutch is in good condition. • Make sure the container is correctly fitted on the base.
Noise and vibration of container.	<ul style="list-style-type: none"> • Make sure the lock ring, blades and joints are securely tightened. • Make sure the rubber clutch is not damaged.
Leakage of liquid from container.	<ul style="list-style-type: none"> • Make sure the lock ring is tightly fastened.

DISPOSAL

Correct disposal of this product (waste electrical and electronic equipment)

(Applicable in the European Union and other countries with separate collection systems in conformity with European Directive 2002/96/EC)

This product has been made from high-quality parts and materials, which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its working life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product and in the operating manual.

Please contact your local government office for information about the exact location of the closer collection point.



WARRANTY

This product is guaranteed against defects in the materials or manufacture for a period of two years from the date of purchase when used according to the instructions in this use and maintenance manual.

During the warranty period, this product can be repaired or replaced, at CEADO SRL option, at no additional cost.

If the products needs maintenance or repairs during the warranty period, contact CEADO SRL for shipping instructions. The product should be shipped in its original package or other suitable packing.

The warranty does not apply in case of neglect, improper use or unauthorized repairs. The warranty does not apply, also, to parts subject to wear such as the container, blades, joints, etc.

The warranty is limited to the costs of repair or replacement of the product or its defective parts, or an amount equivalent to the price paid for its purchase. No additional requests of damages will be considered.

The above instructions must be followed, otherwise the warranty is invalidated and the manufacturer has no liability.

In any case these instructions cannot cover every possible condition and the user is recommended to make responsible use of the appliance.

THE MANUFACTURER RESERVES THE RIGHT TO MAKE ANY ALTERATIONS TO THE APPLIANCE WITHOUT NOTICE
