

Four Star & Five Star Series Scale Cleaning Procedure

The Edlund Four Star & Five Star Series scale lines are NSF Certified.. The end user can clean these scales to maintain sanitary conditions but must follow the cleaning procedure below to prevent damage to and subsequent inaccuracies of these scales.

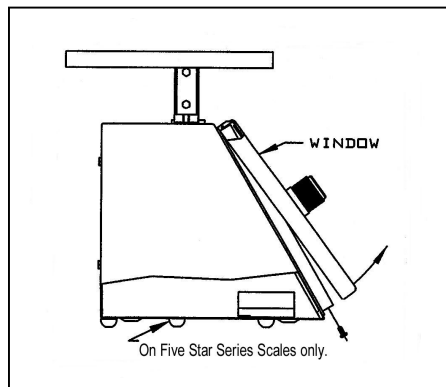


Figure 1

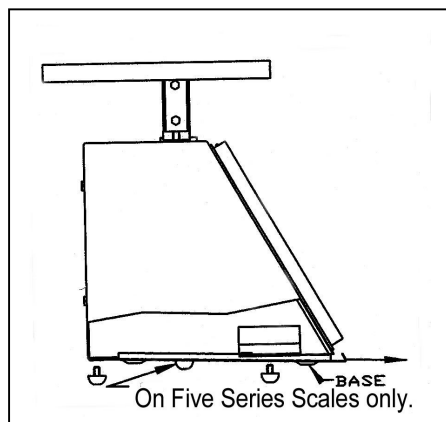


Figure 2

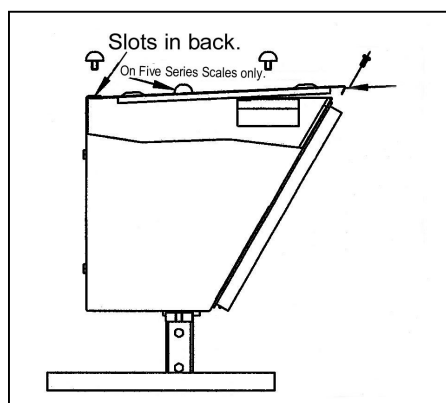


Figure 3

1. The rectangular scale platform has no openings in the food contact area where food can be trapped. To clean the platform wash off the top surface with mild soap and water, rinse and wipe dry.

2a. If it becomes necessary to clean the internal cavity of the scale, remove the scale window by first removing the screw in the bottom edge of the scale window. Grasp the window from the bottom and pull out away from scale case and slide the window free from the two retaining lugs in the top of the white pinion plate. See Figure 1.

2b. Remove the scale base by unscrewing the four foot pads from the bottom of the scale or by removing the foot pads with a screwdriver and pulling the base down and out towards the front of the scale. The internal cavity of the scale is now open for cleaning. See Figure 2.

CAUTION: INTERNAL PARTS MAY HAVE SHARP EDGES. DO NOT PUT HAND INSIDE THE SCALE.

2c. To clean the internal cavity of the scale, submerge in a bath of mild soap and water and move up and down to remove any accumulated food product. Rinse by moving scale up and down in warm rinse water. Let scale air dry before you reassemble it. Do not clean internal cavity of scale with window in place.

2d. If scales containing dashpots are submerged, the water must be removed from the dashpot before it can be reused. Press down the platform of the scale and allow the platform to return repeatedly until water is removed. Allow the scale to air dry for at least 2 hours before using.

2e. Do not submerge window in water. If it becomes necessary to wash the window, wash the outside using a soft cloth and mild soap and water. Wipe clean using a soft, non-abrasive cloth and let air dry.

3. To reassemble the scale, slide the base in place on the bottom of the scale making sure that the base slides into the slot provided by the back of the scale. Align the four holes in the base with the holes in the scale case assembly and secure using the four foot pads. See Figure 3. Slide the top of the window over the top of the white plastic pinion plate making sure that the two slots in the inside top edge of the window are over the two lugs in the top outside edge of the pinion plate. Slide the window over the pinion plate, align the hole in the bottom edge of the window with the screw thread of the pinion plate and secure with the screw. See Figure 4.

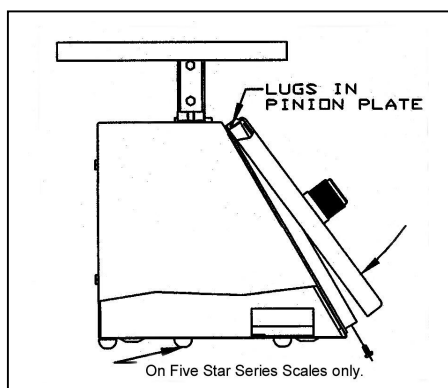


Figure 4

The scale is ready for use.

WARNING: THIS PRODUCT IS NOT DISHWASHER SAFE. THE EXTREME TEMPERATURES AND CLEANING CHEMICALS MAY DAMAGE THE PLASTIC PARTS OF THE SCALE.